

Addendum 1: Actuator Support Installation on a MOOSE PLOW

Adapter Plate: None Required

1. Disconnect the plow from the ATV at the push tube assembly, per the manufacturer's instructions.
2. Tip plow to gain access to the underside of the plow angle adjustment assembly.
3. Remove and discard the (2) bolts, u-bolt and the (4) used lock nuts that secure the blade positioning lever mounting bracket.
4. Install the assembled actuator support in the (4) vacant holes in the blade positioning lever mounting bracket.

Note: Ensure the (4) jam nuts are in place on the underside of the actuator support angles creating a 3/16" gap between the actuator support and the blade positioning lever mounting bracket.

4. Secure using (4) new 3/8-16 Nylock nuts.
5. Reconnect the plow to the ATV and install the actuator as described in step "C" of the instructions.

